


**Power distribution fuse box for MEGA fuse**

Thermoplastic box with lid to be used on the positive pole of the battery  
To be matched with a MEGA fuse. 200A max capacity.

Code	mm	Fuses to be used
14.100.38	80x55x33(H)	14.099.44/45/46/47

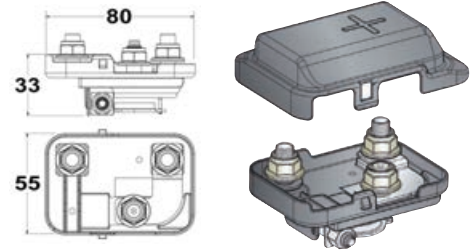

**Fuse holder boxes**

Fit for regular blade fuses (ATP - ATO - ATC).  
Equipped with control LED on each fuse.  
12/24V voltage. 100A max total load.  
20A max load for each fuse. Stickers with several signs included in the package.  
Use the basic modules 1 and 2 to arrange the combinations shown and many others. The 100A max total load is the sole limit.

Code	Type	Fuse housing	Contacts	mm
14.182.01	basic module	6-unit fuse holder	faston	86x78x41
14.182.02	basic module	12-unit negative bus bar	faston	86x57x41

**OSCOLATI**



▲ 14.182.01 (1)



▲ 14.182.02 (2)



▲ 14.182.01+14.182.02




▲ 14.182.01+14.182.02



▲ 14.182.01



▲ 14.182.02

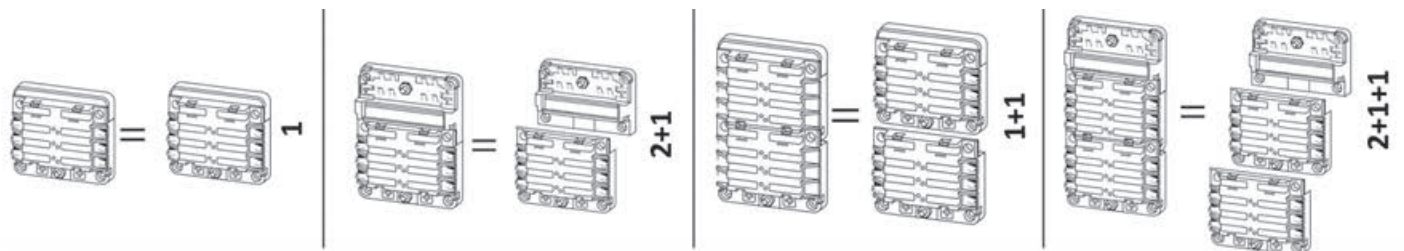

composition examples / esempi di composizione

**Watertight blade fuse holder box**

It can be used with standard, mini and micro fuses. Clear lid and watertight seal. Bayonet terminals.

Code	Fuse housings	Base mm	Max load A	Max load for single fuse
14.100.31	4	85x31	30	15
14.100.32	6	100x31	45	15
14.100.33	8	120x31	60	15
14.100.34	10	140x31	90	15



▲ 14.100.31

▲ 14.100.31

**Watertight blade fuse holder with deep lid**

It can be used with the following fuses: **standard, mini, micro, standard resettable, mini resettable et micro resettable.**

Code	Fuse housings	Base mm	Max load A	Max load for single fuse
14.100.81	4	85x31	30	15
14.100.82	6	100x31	45	15
14.100.83	8	120x31	60	15
14.100.84	10	140x31	90	15



▲ 14.100.81

▲ 14.100.81